

**Feature:**

- Mounts easy on round & square shaft (with option -8).
- Power supply high voltage 120 or 240 VAC.
- External clutch for manual adjustments.
- Maintenance free.
- Position indicator.
- Feedback (on model 1105 & 1205).
- Auxiliary switches (on model 1121 & 1221).


	<i>New Number</i>
BBTHV1100A	<i>BT100</i>
BBTHV1105A	<i>BT105</i>
BBTHV1121A	<i>BT120</i>
BBTHV1200A	<i>BT200</i>
BBTHV1205A	<i>BT205</i>
BBTHV1221A	<i>BT220</i>

Technical Data	BBTHV1100A <i>BT100</i>	BBTHV1105A <i>BT105</i>	BBTHV1121A <i>BT120</i>	BBTHV1200A <i>BT200</i>	BBTHV1205A <i>BT205</i>	BBTHV1221A <i>BT220</i>
Auxiliary switches	No	No	Yes (2)	No	No	Yes (2)
Feedback	No	Yes	No	No	Yes	No
Power supply	110 to 130 VAC 50/60Hz			220 to 250 VAC 50/60Hz		
Power consumption	4 Watts at 120 VAC (0.166A AC)			7 Watts at 240 VAC (0.166A AC)		
Control signal	3 wire / 2 position, 3 wire / 3 point floating					
Running time through 90°	20 to 30 sec Torque depending					
Torque	50 in.lb. [5,6 Nm] at rated voltage					
Electrical connection	18 AWG [0.8 mm ²] minimum					
Inlet bushing	2 inlet bushing of 5/8 in [15.9 mm] & 7/8 in [22.2 mm]					
Angle of rotation	0 to 90 degrees, mechanically adjustable (factory set with 90° stroke)					
Direction of rotation	Reversible, Clockwise (CW) or Counterclockwise (CCW) (factory set with CW direction)					
Ambient temperature	0°F to +122°F [-18° C to +50° C]					
Storage temperature	-22°F to +122°F [-30° C to +50° C]					
Relative Humidity	5 to 95 % non condensing.					
Weight	3 lbs. [1.4 kg]					

Warning: Do not press the clutch when actuator is powered

Warning: High Voltage

Dimensions

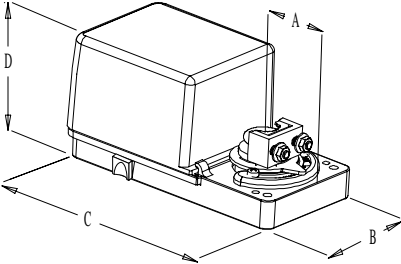

Dimension	Inches	Metric (mm)
A	1.50	38.1
B	3.26	82.8
C	6.60	167.5
D	3.01	76.4

Caution

We strongly recommend that all neptronic products be wired to a separate transformer and that transformer shall service only neptronic products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.

When multiple actuators are wired on a single transformer, polarity must be observed. Long wiring runs create voltage drop which may affect the actuator performance.



Mechanical installation

MOUNTING BRACKET

CLUTCH


1. Manually close the damper blades and positioned the actuator at 0° or 90°.
2. Slide the actuator onto the shaft.
3. Tighten the nuts on the “U” bolt to the shaft with a 8mm wrench to a torque of 60 in.lb. [6,7 Nm].
4. Slide the mounting bracket under the actuator. Ensure free movement of the slot at the base of the actuator. The bracket pin must be placed in the mid distance of the slot.
5. Fix the bracket to the ductwork with #8 self-tapping screws.

Wiring Diagrams

3 wire / 2 position (ON-OFF)



3 wire / 3 point floating

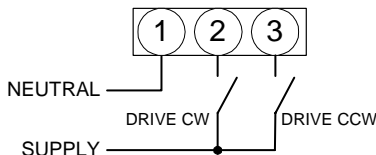

Warning: High Voltage

PC Board

Potentiometer
Only on model 1105 & 1205

BBTHV1X00A

JP1 1 2 3 JP2 6 7 8

Terminal

Feedback or switches terminal
Only on model 1105, 1121, 1205 & 1221

Rotation direction

Rotation direction

CW
(0 to 90°)

CCW
(90 to 0°)

Stroke adjustment

To adjust the stroke, move the adjustment screws at the desired position.